



INTERNATIONAL TELECOMMUNICATION UNION

**CCITT**

THE INTERNATIONAL  
TELEGRAPH AND TELEPHONE  
CONSULTATIVE COMMITTEE

**G.111**

(11/1988)

SERIES G: TRANSMISSION SYSTEMS AND MEDIA,  
DIGITAL SYSTEMS AND NETWORKS

General characteristics of international telephone  
connections and circuits – General recommendations on  
the transmission quality for an entire international  
telephone connection

---

**LOUDNESS RATINGS (LR<sub>s</sub>) IN AN  
INTERNATIONAL CONNECTION**

Reedition of CCITT Recommendation G.111 published in  
Blue Book Fascicle III.1 (1988)

---

## NOTES

- 1 CCITT Recommendation G.111 was published in Fascicle III.1 of the *Blue Book*. This file is an extract from the *Blue Book*. While the presentation and layout of the text might be slightly different from the *Blue Book* version, the contents of the file are identical to the *Blue Book* version and copyright conditions remain unchanged (see below).
- 2 In this Recommendation, the expression “Administration” is used for conciseness to indicate both a telecommunication administration and a recognized operating agency.

## Recommendation G.111

### LOUDNESS RATINGS (LRs) IN AN INTERNATIONAL CONNECTION

(Geneva, 1964; amended at Mar del Plata, 1968,  
Geneva, 1972, 1976 and 1980; Malaga-Torremolinos, 1984  
and Melbourne, 1988)

#### Preamble

Paragraphs 1 to 5 of this Recommendation apply in general to all-analogue, mixed analogue/digital and all-digital international telephone connections. However, where recommendations are made on specific aspects in § 6 for mixed analogue/digital or all-digital connections, § 6 will govern.

In the international transmission plan, the loudness rating (LR) between two subscribers is not strictly limited; its maximum value results from the various Recommendations indicated below.

The CCITT,

*considering*

(a) that loudness ratings (LRs) as defined in Recommendation P.76 have been determined by subjective tests described in Recommendation P.78 and that the difference between the values thus determined in various laboratories (including the CCITT Laboratory) are smaller than for reference equivalents;

(b) that for planning purposes, LR's are defined by objective methods as described in Recommendations P.65, P.64 and P.79;

(c) that the conversion formulae from reference equivalents (REs) and corrected reference equivalents (CREs) (see Annex C) are not accurate enough to be applied to specific sets; that therefore, the Administrations who still rely on values of reference equivalents (determined in the past in the CITT Laboratory) for the type of sets used, will need to find recommended values of corrected reference equivalents in CCITT documentation,

*recommends*

that the values given below, either in terms of LR should be used to verify that international telephone connections provide an adequate loudness of received speech.

that Administrations employing CREs should preferably translate the LR's of this Recommendation into their national CREs by the methods given in Annex C or, as a second choice, apply the values given in Volume III of the *Red Book*.

*Note 1* – The main terms used in this Recommendation are defined and/or explained in Annex A.

*Note 2* – For many telephone sets using carbon microphones, the SLR and STMR values can only be determined with limited accuracy.

## 1 Nominal LR's of the national systems

### 1.1 Definition of nominal LR's of the national systems

Send and receive loudness ratings, SLRs and RLRs respectively, may in principle be determined at any interface in the telephone network. When specifying SLRs and RLRs of a national system, however, the interface is chosen to lie at the international exchange.

An increasing number of international systems will be connected to national systems via a *digital* interface, where by definition the relative levels are 0 dBr. Therefore, in this Recommendation and in Recommendation G.121, the SLRs and RLRs of the *national systems* are referred to a *0 dBr point* at the international exchange. (See Recommendation G.101, § 5). This convention is applied both for digital and analogue interconnections between the national and international systems (unless otherwise specified in particular cases).

If these interconnections are made on an analogue basis, however, the actual relative levels at the interface may be chosen by the Administration concerned. Thus, if the standardized relative levels at the analogue interface are  $S$  dBr and  $Q$  dBr for the (national) sending and receiving systems respectively, the relation between the actual LR at the interface and a 0 dBr point are

$$SLR \text{ (Interface)} = SLR - S$$

$$RLR \text{ (Interface)} = RLR + Q$$

(see Figure 1/G.111).

Moreover, for transmission planning purposes, the concept of the virtual analogue switching point (VASP) has often been used. The VASPs generally have no physical existence but have been found to be convenient when studying all-analogue and mixed analogue/digital connections. If the international section is analogue, or mixed analogue/digital, the relative levels at the VASP are by convention:

$$S = -3.5 \text{ dBr}$$

$$Q = -4.0 \text{ dBr.}$$

*Note 1* –  $Q = -4.0$  dBr corresponds to a 0.5 dB nominal loss between the VASPs of the international circuit. However, if a single international circuit is used only for comparatively short and straightforward international connections, this loss may be increased if the use of echo control devices can thereby be avoided. See Recommendation G.131, § 2.1. Thus, in such cases the value of  $Q$  will be decreased accordingly.

*Note 2* – If the international analogue circuit exhibits an appreciable attenuation distortion with frequency, the overall loudness rating (OLR) of the international connection may increase slightly more than the nominal loss between the VASPs. See § A.4.2.

The concept of VASP has also been used when the international circuit was digital. The convention is then:

$$S = -3.5 \text{ dBr}$$

$$Q = -3.5 \text{ dBr.}$$

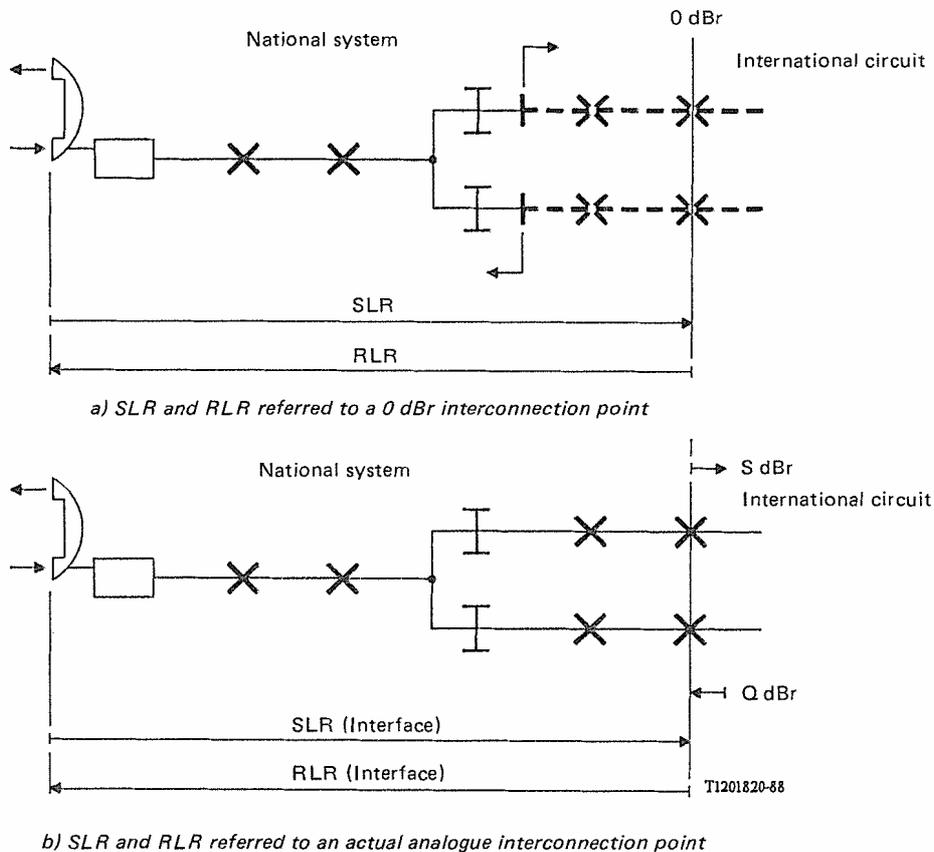


FIGURE 1/G.111

**Definition of SLR and RLR reference points for a national system**

## 1.2 *Recommended values*

Recommendation G.121 gives objectives for the nominal SLR and RLR of national systems.

## 2 **Nominal overall loss of the international chain**

The nominal loss between the virtual switching points of each international analogue circuit should in principle be 0.5 dB at 1020 Hz. However, some circuits can be operated with higher losses (see Recommendation G.131, § 2.1) and certain analogue circuits may be operated at zero loss (see Note 3 of Recommendation G.101, § 5). Digital circuits are used with a nominal transmission loss of 0 dB (see § 6).

As far as transmission is concerned, there is no strict limit on the number of international analogue circuits which may be interconnected in tandem, provided each of them has a nominal loss, between the virtual switching points, of 0.5 dB in the transit condition and provided there is a 4-wire interconnection. Naturally, the fewer the number of interconnected circuits the better the transmission performance is likely to be (see Recommendation G.101, § 3).

*Note* – Information on the actual number of circuits which are found in international connections is given in Recommendation G.101, § 3.

## 3 **LRs and directional effects in a complete connection**

### 3.1 *Nominal LRs for each transmission direction*

Paragraphs A.3 and A.4 of Annex A show how to calculate OLR, the overall loudness rating, of a complete connection. The nominal OLR of an international connection is the sum of:

- the nominal SLR, send loudness rating, of the national sending system (see Recommendation G.121, § 4, and Annex A);
- the nominal CLR, circuit loudness rating, of the international chain (see Annex A);
- the nominal RLR, receive loudness rating, of the national receiving system (see Recommendation G.121, § 4, and Annex A).

### 3.2 *Traffic-weighted mean values of OLRs*

For connections under practical conditions a suitable value of OLR seems to be 10 dB in most cases.

*Note* – For connections totally free from echo and sidetone problems, investigations have shown the optimum OLR to be somewhat lower, about 5 dB, but the optimum is rather flat so that moderate deviations from the given value have little subjective effect. (However, the “preferred OLR” in a particular application will to some extent depend on what subscribers have become used to. Thus, in some analogue PBXs, internal calls have had a very low OLR. Replacing such a PBX by a digital PBX having a higher OLR might cause some subscriber comments on “low speech levels”. Some Administrations have solved this problem by means of a manual volume control in the receive part of the telephone set, the total range of variation being in the order of 10 to 12 dB. Note that in mobile telephony a common practice is to include a volume control which affects both the receive and send sides but in opposite directions.)

The long-term objective for the traffic-weighted mean value should lie in the range of 8 to 12 dB.

An objective for the mean value is necessary to ensure that satisfactory transmission is given to most subscribers.

*Note 1* – The long-term values cannot be attained at this time and an appropriate short-term objective for OLR is a range of 8 to 21 dB.

*Note 2* – The 0.5 dB transmission loss of each analogue circuit in the international chain (see § 2 above) has been allowed for by noting that the average number of international circuits encountered in international connections is 1.1. (See Recommendation G.101 § 3.)

As a result the ranges mentioned above do not include allowances for connections between countries which:

- involve more than one 0.5 dB international circuit;
- involve a single international circuit which has a higher loss than 0.5 dB as permitted by Recommendation G.131, § 2.1.

*Note 3* – Recommendation G.121, § 1 gives values for national systems based on the overall objectives of this Recommendation.

*Note 4* – The ranges stated for OLR are for planning and do not include measuring and manufacturing tolerances.

*Note 5* – Besides loudness, other important factors have to be considered in transmission planning. Sidetone, echo and stability problems may cause degradation of the overall speech quality in a connection. Thus, it is important to adopt an adequate *impedance strategy* in the national transmission plan to avoid harmful mismatches in the network. (An example is given in Supplement 10 of Fascicle VI.1.)

### 3.3 *Difference in transmission loss between the two directions of transmission*

In an international connection between local exchanges the contribution to the asymmetry introduced by the two national systems is limited by the provisions of Recommendation G.121, § 2.2. The international circuits could, in practical circumstances outlined in the General Remarks in Recommendation G.101, § 4 introduce additional asymmetry. This additional asymmetry will be acceptably small.

## **4 Variation in time and effect of circuit noise**

### 4.1 *Variations in time*

The LR values calculated for national systems (Recommendation G.121, § 4) do not cover variations in time of the loss of various parts of the national system. Recommendation G.151, § 3 gives the objectives recommended by the CCITT for transmission loss variations on international circuits and national extension circuits as compared with the nominal values.

### 4.2 *Effect of circuit noise*

See Recommendation G.113.

## **5 Practical limits of the OLR between two operators or one operator and one subscriber**

The same loudness rating limits as between two subscribers should apply.

## **6 Incorporation of PCM digital processes in international connections**

### 6.1 *Connections with a digital 4-wire chain extending to the local exchanges*

As the national network develops, an international telephone connection might have the configuration indicated in Figure 2/G.111, in which the analogue/digital interface occurs at the local exchange. In such a connection, the nominal transmission loss introduced by the 4-wire chain of national and international digital circuits is 0 dB. Consequently, the 4-wire chain generally does not contribute to the control of stability and echo. However, part of the loss required to control stability and echo is at the local exchange, as indicated by the R and T pads, the remainder being provided by the balance return loss at the 2-wire/4-wire terminating unit (see also Recommendation G.122).

Values of R and T are discussed in Recommendation G.121, § 6, where it is concluded that values can be chosen to cater for the national losses and levels, provided that the CCITT Recommendations for international connections are always met. For example, the sum of R and T will need to be at least so high that the requirements of Recommendation G.122 are met. This should be especially noted in cases when stability balance return losses approach 0 dB at the 2-wire/4-wire terminating unit. Examples of values for R and T that have been adopted by some Recommendations are given in Annex C to Recommendation G.121.

Other transmission considerations to be taken into account in the planning of connections involving 4-wire local exchanges in a mixed analogue/digital network include system loading and crosstalk.


Figure 2/G.111 also shows R and T as analogue pads. This need not always be the case since under some conditions it might be more practical or necessary to introduce the required loss by means of digital pads. However, if digital pads are used, their detrimental effect on digital data or other services requiring end-to-end bit integrity must be taken into account as indicated in Recommendations G.101, § 4.4 and G.103, § 4.

### 6.2 *Mixed analogue/digital connections*

To provide satisfactory transmission on international connections in the mixed analogue/digital period, it is likely that existing national transmission plans will have to be amended or new ones developed to provide for appropriate

national extensions. All the relevant CCITT Recommendations should be complied with. The Recommendations concerning national extensions with 4-wire chains extending 4-wire local exchanges are given in Recommendation G.121, § 6.

Thus, the transmission planning of transition phases should preferably not involve any degradation of the quality previously experienced.

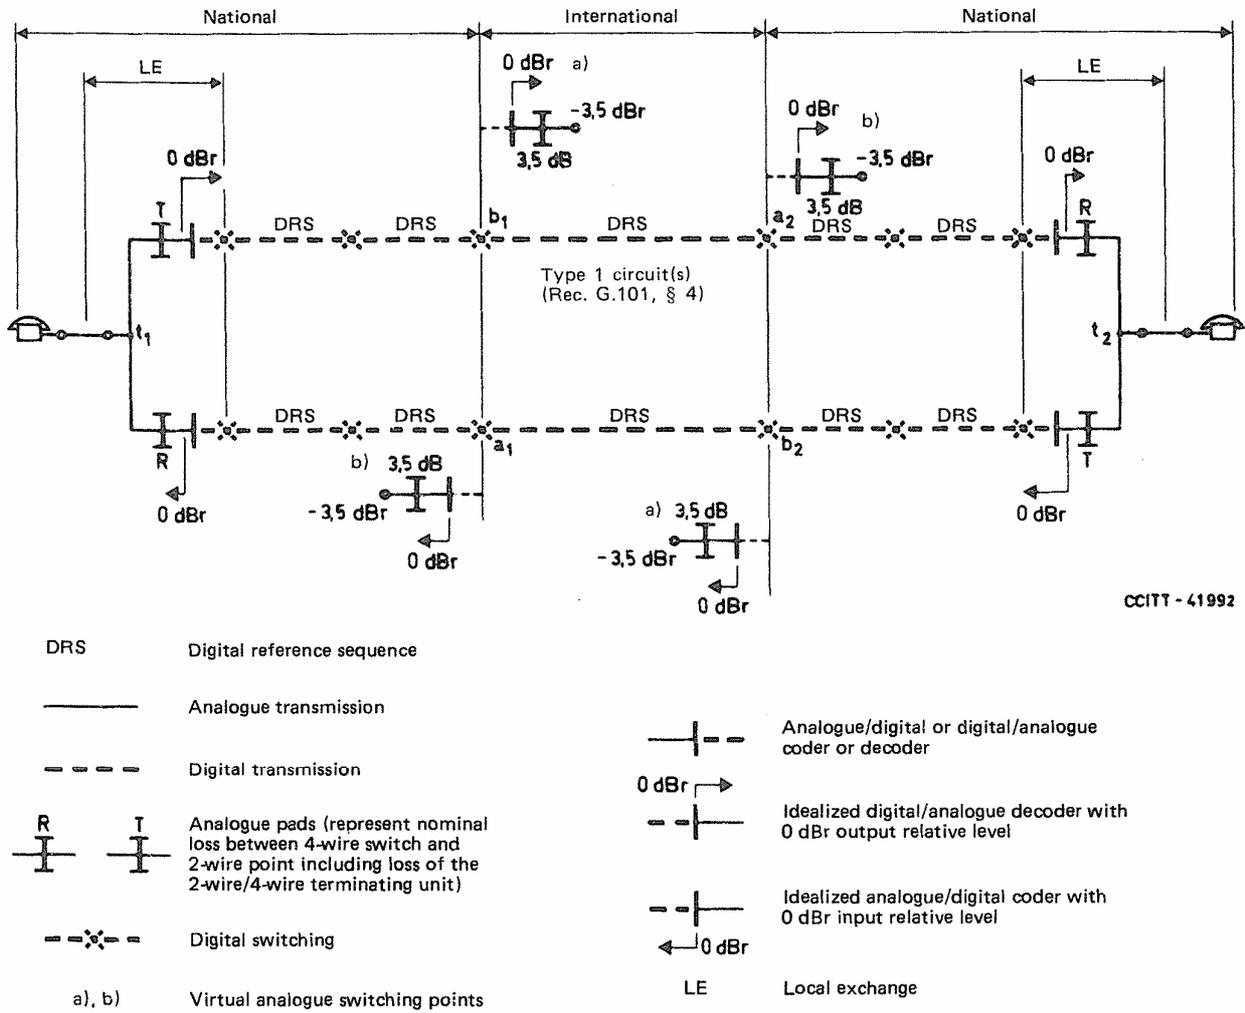

CCITT - 41992

FIGURE 2/G.111

**Example of an international connection in which the digital 4-wire chain extends to a 4-wire local exchange with 2-wire analogue subscriber lines**

## ANNEX A

(to Recommendation G.111)

### **Explanations related to Recommendations G.111, G.121, G.122 G.131, G.134: properties and uses of loudness ratings**

*Note* – The CCITT *definitions* of loudness ratings can be found in Volume V.

#### A.1 *General explanations of loudness rating terms as used in the Series G Recommendations*

##### A.1.1 *Loudness rating (LR)*

As used in the Series G Recommendations for planning; loudness rating is an *objective* measure of the loudness loss, i.e. a weighted, electro-acoustic loss between certain interfaces in the telephone network. (The nature of the weighting will be dealt with later.) If the circuit between the interfaces is subdivided into sections the sum of the individual section LRs is equal to the total LR.

How to determine and to apply LRs in the Series G Recommendations is described in §§A.3 and A.4. The methods are sufficiently accurate for all practical purposes. (Fundamentally, loudness ratings are based on subjective methods as described in Recommendations P.76 and P.78. However, subjectively measured values, in general, vary too much with time and test teams to be really useful for transmission planning.)

In loudness rating contexts, the subscribers are represented from a measuring point of view by an artificial mouth and an artificial ear respectively, both being accurately specified.

##### A.1.2 *Overall loudness rating (OLR)*

The loudness loss between the speaking subscriber's mouth and the listening subscriber's ear via a connection.

##### A.1.3 *Send loudness rating (SLR)*

The loudness loss between the speaking subscriber's mouth and an electric interface in the network. [The loudness loss is here defined as the weighted (dB) average of driving sound pressure to measured voltage.]

##### A.1.4 *Receive loudness rating (RLR)*

The loudness loss between an electric interface in the network and the listening subscriber's ear. [The loudness loss is here defined as the weighted (dB) average of driving e.m.f. to measured sound pressure.]

##### A.1.5 *Circuit loudness rating (CLR)*

The loudness loss between two electrical interfaces in the network (via a circuit), each interface terminated by its nominal impedance which may be complex. [The loudness loss is here approximately equivalent to the weighted (dB) average of the composite electric loss.]

*Note* – Junction loudness rating (JLR) is a special case of CLR, the terminations being 600 ohms resistive.

##### A.1.6 *Sidetone loudness losses*

###### A.1.6.1 *Talker's sidetone, sidetone masking rating (STMR)*

The loudness loss between a subscriber's mouth and his (earphone) ear via the *electric* sidetone path (see Recommendation P.10 for a full definition).

###### A.1.6.2 *Listener's sidetone rating (LSTR)*

The loudness loss between a Hoth-type room noise source and the subscriber's (earphone) ear via the *electric* sidetone path (see Recommendation P.10 for a full definition).

### A.1.7 *Echo loudness losses*

#### A.1.7.1 *Talker echo loudness rating (TELR)*

The loudness loss of the speaker's voice sound reaching his ear as a delayed echo.

#### A.1.7.2 *Listener echo loudness rating (LELR)*

The difference in loudness loss between the speaker's direct voice sound and its delayed echo reaching the listening subscriber's ear.

#### A.1.8 *Crosstalk receive loudness rating (XRLR)*

The loudness loss from a disturbing electric interface to the disturbed subscriber's ear via the crosstalk path.

### A.2 *Psycho-acoustic model for loudness ratings*

By the fundamental definition of loudness ratings, a *flat loss* (i.e. a loss constant with frequency) introduced in a path increases the loudness rating by the same amount. When evaluating the influence of a frequency-dependent loss, however, one needs a psycho-acoustic model of how the brain interprets loudness impressions. Therefore, a short description will be given of a simple model found adequate for loudness rating planning considerations. (See Recommendation P.79 for more complete explanations.)

The ear can be thought of as a bank of bandpass filters approximately equally spaced on a logarithmic frequency scale. If the sound signal in a certain band exceeds the threshold of hearing, the corresponding filter produces an output. All filter outputs are then added to create an impression of loudness, the rule of addition depending on the sound level.

For very *low* sound levels (near the threshold of hearing) the filter outputs are added on a power basis. For *normal* speech sound levels, the loudness measure can be described as obtained neither as power nor voltage addition but rather as the sum of the *logarithm* of the filter outputs. The procedure can be described by Equation (A.2-1) which covers sound levels from very low to normal. (This algorithm is in effect the same as the one given in Recommendation P.79, only written in a slightly different form.)

$$LR = L_0 - \frac{10}{m} \log_{10} \left\{ \sum_{i=1}^N K_i \cdot 10^{-0.1mL_i} \right\} \quad (\text{A.2-1})$$

where

$L_0$  is a constant (for instance,  $L_0$  is equal to 0 for CLR, LELR), depending on the particular LR in question.

$N$  is the number of equivalent bandpass filters, the index  $i$  refers to filter No.  $i$  at frequency  $f_i$ . (Usually, the "filters" are chosen with a 1/3-octave spacing in the frequency scale. The appropriate frequency range to consider will be discussed later.)

$L_i$  is the loss at  $f_i$  of the path under study. (Provided the sound level at that frequency is above the threshold of hearing.)

$m$  (the "loudness growth factor") is a constant depending on the sound level:

$m = 0.2$  for normal speech levels,

$m = 0.5$  for "lower" sound levels (corresponding to voltage addition),

$m = 1$  for very low sound levels, near the threshold of hearing (corresponding to power addition).

$m = 0.2$  is applicable for OLR, SLR, RLR, JLR, CLR and sidetone phenomena, while  $m = 0.5$  and 1 are appropriate for echo and cross-talk.

$K_i$  is the weighting coefficient at  $f_i$ . The  $K_i$ 's have the general property that their sum is equal to 1 in the frequency range considered:

$$\sum_{i=1}^N K_i = 1 \quad (\text{A.2-2})$$

The  $K_i$ 's are determined by the following factors:

a) voice spectrum of the "average" speaker;

- b) hearing acuity of the “average” listener;
- c) frequency response of the “nominal” path typical for the particular LR in question.

The shape of the  $K_i$ -weighting is not very critical. For transmission planning, most often a flat weighting will do. This topic is treated below in §§ A.3 and A.4.

Equation (A.2-1) can be applied in various loudness-related rating calculations. Examples may be found in Supplement No. 19, Volume V.

What frequency range should be used in the computations? For LR planning purposes, only that frequency range should be considered in which the transmission is assured. In general, this means from 300 Hz to 3400 Hz for international calls. However, for very weak speech sounds, such as just discernable crosstalk, the proper band for computation is narrower, in the order of 500 Hz to 2000 Hz. This is because the human hearing acuity falls off at the band edges for low level sounds.

*Note* – The  $K_i$ 's are different for the 300-3400 Hz and the 500-2000 Hz bands.

It is immediately apparent again from Equations (A.2-1) and (A.2-2) that a flat loss of  $L$  dB will increase the LR by the same amount. It also turns out that if the spread in the  $L_i$ -values is *moderate*, Equation (A.2-1) can be simplified to:

$$LR = L_0 + \sum_{i=1}^N K_i \cdot L_i \quad (\text{A.2-3})$$

This linear approximation is the reason why the total loudness rating of a connection can be computed by simply adding the loudness ratings of its parts. The procedures to follow will be discussed in § A.4. [A rule of thumb: if  $m = 0.2$  and the spread in  $L_i$  is less than 10-15 dB, Equation (A.2-3) can be applied.]

### A.3 *Measurement of loudness ratings of telephone sets*

The loudness ratings of telephone sets are determined objectively by special measuring instruments conforming to Recommendations P.64, P.65 and P.79 with regard to the physical implementation and computational algorithm respectively. For analogue sets, the measurement set-up must provide a representative current feeding bridge and may or may not include different lengths of (artificial) unloaded subscriber lines. The parameters usually measured are SLR, RLR and STMR.

The results should not be applied directly for transmission planning, however, before some precautions are observed regarding bandwidth and terminating impedances.

Commercial instruments following Recommendation P.79 use a measuring band of 200 to 4000 Hz or even 100 to 8000 Hz. This is a good deal wider than the band for which CCITT Recommendations specify an assured transmission, namely 300 to 3400 Hz. (See for instance Recommendations G.132 and G.151.) Thus, in a national system which may be included in an international connection one has to consider the analogue telephone set being somewhat less loud than the P.79-measured values.

Also note that the P.64-P.79 loudness rating measurements are specified to be made with a terminating impedance of 600 ohms. This is most often not the impedance appearing in the 2-wire part of the network. For various reasons, many Administrations now specify a complex nominal impedance. Thus, there will be a mismatch effect.

For SLR and RLR an investigation has been made for a range of typical analogue telephone set sensitivity and impedance characteristics as well as nominal impedances. The result is that, with sufficient practical accuracy, 1 dB should be added to the measured values of SLR and RLR of *analogue* telephone sets in the LR planning of networks which can be included in an international connection. Thus, with the designation SLR<sub>w</sub> and RLR<sub>w</sub> for the measured values:

$$SLR = SLR_w + 1 \quad (\text{A.3-1})$$

$$RLR = RLR_w + 1$$

Note that the same correction also applies when an unloaded subscriber cable is included in the P.79 measurements.

For *digital* sets, however, the correction is *not* needed because the coded and filters in the set limit the band to a certain extent.

In the following the designations SLR and RLR always refer to planning values. Specifically, SLR(Set) and RLR(Set) refer to the telephone set itself without subscriber cable, and including the 1 dB correction in the analogue case.

Parameters of further interest to the planner are of course the telephone set input impedance  $Z_c$  and/or its return loss against the nominal circuit impedance.

Note that for STMR measurements the line terminating impedance must be so specified that it represents realistic network conditions, i.e. a termination not necessarily 600 ohms.

In addition to straightforward STMR measurements, it is useful to determine the so-called “no sidetone line impedance”  $Z_{s0}$ , or equivalent sidetone balance impedance. Knowing  $Z_{s0}$  in addition to SLR and RLR, the transmission planner is able to estimate the sidetone performance better under the widely varying conditions which may occur in the network. See § A.4.3 for further details. (Note that  $Z_{s0}$  may vary with the line current.)

Listener sidetone may cause some subscriber difficulties when modern, high-sensitivity sets having linear microphones are used in noisy environments. To get a quantitative understanding of the problem, the set sending sensitivity curves for both direct (speech) sound and diffuse (room noise) sound should be measured. (See the *Handbook on Telephony* [4] and Recommendation P.64 for details.) The result is preferably presented as the difference:

$$DELSM = S_s (\text{diffuse}) - S_s (\text{direct}) \quad (\text{A.3.2})$$

(See § A.4.3.3.)

*Note 1* – DELSM is fairly constant with frequency. (The diffuse field sensitivity measurements should be made with an obstacle resembling the human head in front of the handset microphone. The present practice is to use the LR artificial mouth as such an obstacle. However, the detailed measurement procedure is under study.)

*Note 2* – The actual shape of the frequency-dependent  $K_f$ -weighting in the P.79 algorithm as used for telephone set measurements is of no immediate concern to the transmission planner. However, the P.79 weighting seems not to represent “ordinary people’s” speech and hearing too well. Therefore, if one tries to analyze attenuation distortion and bandwidth limitation effects on loudness only, P.79 results must be interpreted with caution.

*Note 3* – Up to now, when making national transmission plans, most Administrations have used other forms of objective measuring instruments to characterize the telephone sets. Translating such a transmission plan into terms of loudness ratings means a corresponding conversion of the “old” telephone set data. This should be done by actually *measuring* the loudness ratings of typical examples of the sets in use. (There is too much uncertainty in general conversion formulas to obtain LRs from RE, CRE, OREM-B, IEEE-Objective LR, etc.)

#### A.4 Application of loudness ratings in the Series G Recommendations

##### A.4.1 General remarks

Theoretically, one could determine the total attenuation/frequency response between the input and the output ports and compute the LR in question by an algorithm as given in § A.2. However, for transmission planning it is far more convenient to evaluate the LR of the *individual* parts. This is especially true for the present situation with a proliferation of different types of telephone sets allowed in most Administrations’ networks. Therefore, in what follows the telephone set influence on loudness ratings will be characterized by its SLR and/or RLR value(s).

Most important in transmission planning for loudness performance is to have *consistent* rules – even if they are simple. To strive for high precision in the computations is rather illusory. For example, the subscriber may control the subjective loudness quite substantially with his handset: voluntarily by pressing it more or less strongly to his ear (10 dB range?) and involuntarily by moving the microphone away from its optimum position.

##### A.4.2 Normal speech transmission

Figure A-1/G.111 depicts a speech connection between two subscribers, consisting of several cascaded parts.

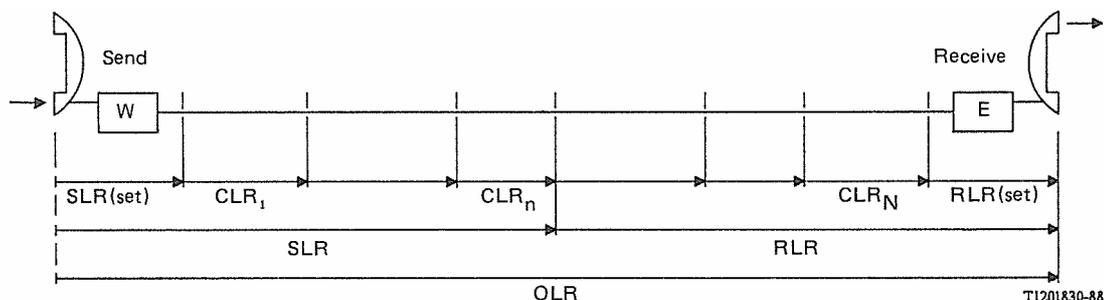


FIGURE A-1/G.111

LRs in a normal speech connection

The send and receive loudness ratings of the telephone sets themselves are designated as SLR(set) and RLR(set) respectively and the circuit loudness ratings as CLR<sub>n</sub>. (For explanations, see § A.1.) Then, at interface  $I = n$  in the direction from S to R we have:

$$\begin{aligned} SLR &= SLR(\text{set}) + \sum_{i=1}^n CLR_i \\ RLR &= RLR(\text{set}) + \sum_{i=n+1}^N CLR_i \end{aligned} \tag{A.4-1}$$

$$OLR = SLR + RLR$$

SLR(set) and RLR(set) are determined (measured) according to the principles described in § A.3.

When the circuit loss is constant with frequency the CLR is, of course, equal to the composite loss at the reference frequency 1020 Hz, using the nominal impedances appropriate to the particular interfaces. Thus, normally the CLRs are equal to the *difference in relative levels* between the respective interfaces. (The exception occurs when the circuit includes an interface having a “jump” in the relative level. See Recommendation G.121, § 6.3 for a discussion.)

If the attenuation distortion is noticeable, the CLR is equal to the *average loss* over the frequency band 300 Hz to 3400 Hz on a logarithmic frequency scale, i.e. a flat  $K_T$ -weighting in Equation (A.2-3) and with the constant  $L_0 = 0$ . [If the attenuation distortion is exceptionally high Equation (A.2-1) should be used with  $m = 0.2$ ] The loss is to be measured or computed as a *voltage loss*, corrected by a frequency-independent term, i.e. the loss is equal to the sum of the composite loss at 1020 Hz and the voltage loss deviation from the value at 1020 Hz. (This practice is in accordance with Recommendation G.101, § 5.3.2.2).

*Note 1* – Some Administrations may instead, want to use the so-called composite loss distortion as a basis for computing the CLR of a circuit in their national transmission planning. Moreover, the various aspects of the complete user end-to-end loss distortion is being studied by Study Group XII.

When the loss is determined by measurement it should be under nominally matched impedance conditions. In practice, this means *either* between two physical impedances as is the case for 600 ohms measurements *or* between a low-impedance generator and a high-impedance indicator. Either method can be used, depending on what is most practical. The measurement results do not differ very much. In the latter case, a 6 dB correction must of course be applied.

It is interesting to note that, for *unloaded subscriber cable* sections, the CLRs are equal to the composite loss at the reference frequency 1020 Hz with sufficient accuracy for planning purposes, that is, they are equal to the difference in relative levels at the interfaces. (It turns out that, from a loudness point of view, the lower losses at frequencies below 1020 Hz compensate the higher losses at frequencies above 1020 Hz).

*Note 2* – In the particular case of a subscriber cable, the telephone set and the exchange may have different nominal input impedances. Strictly speaking, one should then consider “insertion loss” rather than “composite loss” as the basis for CLR, as a zero length line should be associated with  $CLR = 0$ . However, the impedance mismatch between set and exchange impedances usually does not result in a significant composite loss at 1020 Hz. Therefore, the designation “composite loss” may also be used in this case.

The CLR per kilometer of an unloaded subscriber cable can also be estimated from the cable characteristics by the following expression:

$$CLR = K\sqrt{R \cdot C} \tag{A.4-2}$$

where

$R$  is the cable resistance in ohms/km

$C$  is the cable capacitance in nF/km

$K$  is a constant, the value of which is dependent on the cable termination:

$K = 0.014$ , if  $Z_0 = 900$  ohms resistive

$K = 0.015$ , if  $Z_0 = 600$  ohms resistive

$K = 0.016$ , if  $Z_0$  is a complex impedance.

*Note 3* – “Complex impedance” means here such 3- or 2-element RC impedances as have been chosen by Administrations to resemble the image impedance of unloaded cables.

*Note 4* – Equation (A.4-2) gives the image attenuation at about 800 Hz for  $K = 0.014$ , and at about 1020 Hz for  $K = 0.016$ . Some Administrations have been using the cable image attenuation at a certain frequency (for instance 1600 Hz) as a measure of the permissible attenuation in the subscriber network. However, the same numerical value should not be used automatically as the permissible CLR when transforming the transmission plan into terms of loudness ratings.

*Note 5* – Most often the errors in CLR when using Equation (A.4-2) are less than 0.4 dB.

Most modern channel equipment, including digital exchanges, can be considered as having essentially flat attenuation/frequency characteristics when estimating CLR's. An example of a more pronounced channel attenuation distortion can be found in Recommendation G.132, dealing with attenuation/frequency distortion limits for 12 4-wire circuits in tandem. Assuming a maximum attenuation variation curve just touching the *upper* corners in Figure 1/G.132, a calculation shows that the attenuation distortion contributes 2.4 dB to the CLR which is to be added to the loss value at 1020 Hz (i.e. about 0.2 dB per circuit.)

*Note 6* – An  $OLR = 9$  dB may be considered as being well within the optimum range for connection loudness. Interestingly, at that value the average acoustic loss from the speaker's mouth to the listener's ear is about 0 dB, taken over a logarithmic frequency scale.

### A.4.3 *Sidetone*

#### A.4.3.1 *General remarks*

As mentioned above, the sidetone quantities STMR and LSTR refer specifically to the signals reaching the ear via the *electric* sidetone path.

#### A.4.3.2 *Talker's sidetone STMR*

STMR can be *measured* as discussed in § A.3, using the actual terminating impedances occurring in the network.

In many circumstances it may be more convenient to *compute* STMR from telephone set data and network data.

For transmission planning purposes, one can use the telephone set loudness ratings and the balance return loss between the line impedance and the sidetone balance impedance. In practice, the following algorithm is generally sufficiently accurate:

$$STMR = SLR(\text{set}) + RLR(\text{set}) + A_m - 1 \quad (\text{A.4-3})$$

where

$SLR(\text{set})$ ,  $RLR(\text{set})$  refer to the telephone set as before.  $A_m$  is a weighted mean of the sidetone balance return loss  $A_{rst}$ :

$$A_m = -\frac{10}{m} \log_{10} \left\{ \sum_{i=1}^N K_i - 10^{-0.1mA_{rst}} \right\} \quad (\text{A.4-4})$$

where:

$m = 0.2$ ; the  $K_i$ 's are found in Table A-1/G.111; and

$$A_{rst} = 20 \log_{10} \left| \frac{Z_c + Z_{s0}}{2Z_c} \cdot \frac{Z + Z_c}{Z - Z_{s0}} \right| \quad (\text{A.4-5})$$

Here,

$Z_c$  is the input impedance of the set

$Z_{s0}$  is the sidetone balance impedance of the set (equivalent)

$Z$  is the impedance of the line, "seen" by the set when the connection is established.

*Note 1* –  $A_{rst}$  is about equal to the return loss between  $Z_{s0}$  and  $Z$ .

*Note 2* – When the *actual* telephone set send and receive sensitivity curves as functions of frequency are known, it is possible to closely simulate STMR measurements by a more elaborate algorithm (Recommendation P.79, § 8).

As can be seen from Table A-1/G.111 and Figure A-2/G.111 there is very little emphasis on the lower frequencies in the STMR weighting. This is because the “human sidetone” path via head bone conduction dominates over the electric path in that frequency range.

Note 3 – STMR = 7 or 8 dB is well within the preferred range of talker’s sidetone. At that value the average acoustic loss from the talker’s mouth to his ear via the electric sidetone is typically about 0 dB (averaging done with the  $K_i$  weighting given in Table A-1/G.111).

TABLE A-1/G.111  
STMR weighting

i	$F_i$ (kHz)	$K_i$
1	0.2	0
2	0.25	0.01
3	0.315	0.02
4	0.4	0.03
5	0.5	0.04
6	0.63	0.05
7	0.8	0.08
8	1	0.12
9	1.25	0.12
10	1.6	0.12
11	2	0.12
12	2.5	0.12
13	3.15	0.12
14	4	0.05

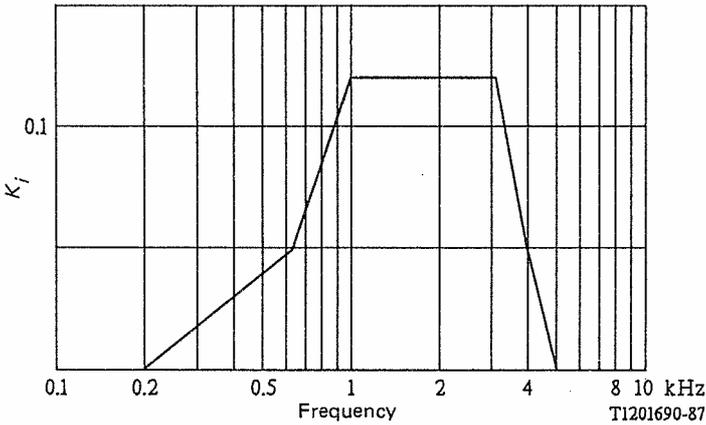


FIGURE A-2/G.111

Sidetone weighting  $K_i$  as given in Table A-1/G.111

A.4.3.3 Listener’s sidetone rating (LSTR)

High room noise at the listening subscriber’s premises disturbs the received speech in several ways:

- a) By noise picked up by the “free” ear. This disturbance can be disregarded here because the brain has a stereophonic analysis ability to “switch off” irrelevant signals coming from the wrong direction.
- b) By noise leaking past the ear at the handset ear.

- c) By noise picked up by the handset microphone and transmitted to the handset ear via the electric sidetone path.

In practice, the phenomena under c) often are the most troublesome. (Of course, they are also the only ones within the control of the transmission planner.)

Investigations have shown that, at low frequencies, the earcap leakage dominates over the electric sidetone path in much the same way as bone conduction does for the talker's sidetone. Therefore, the same  $K_i$ -weighting as for STMR can be applied. (At least if the ear-phone cap is not too awkwardly shaped.) Thus, the LSTR may be computed from STMR and the weighted mean of DELSM, the difference between diffuse and direct sound sensitivity curves of the set (see § A.3):

$$LSTR = STMR + D \quad (A.4-6)$$

$$D = -\sum_{i=1}^N K_i \cdot (DELSM)_i$$

*Note 1* – For modern telephone sets with linear microphones,  $D$  is in the order of 1.5 to 4 dB. The value of  $D$  is, to some extent, dependent on the handset geometric shape but not on the room noise level. Sets with carbon microphones, however, typically have a sensitivity threshold, making them somewhat less susceptible to room noise. Their  $D$ -value is in the order of 6 to 8 dB at 60 dBA room noise. However, some modern designs using linear microphones (notably headsets) also incorporate a sensitivity threshold making them less susceptible to room noise.

*Note 2* – Physically, above 800 to 1000 Hz, the earcap shields the listening ear from a direct pick-up of room noise but the electric path provides an indirect contribution. Under conditions of high room noise (60 dBA or higher) and high loss connections, the listener's sidetone rating should be greater than 13 dB. This corresponds approximately to the earcap having an equivalent room noise shielding effect of 5 to 6 dB at the higher frequencies.

#### A.4.4 Echo and crosstalk

##### A.4.4.1 General remarks

Echo and crosstalk sounds are much less loud than normal speech. Therefore, the “loudness growth factor”,  $m$  in the evaluation algorithm (Equation A.2-1) should be chosen higher than 0.2. Experience has shown the following procedure to be appropriate:

The total loudness rating path under consideration is divided into parts, whose loudness ratings are added. The parts are:

- 1) send and receive circuits of the telephone set(s),
- 2) the purely electric circuits.

For the telephone set(s), the normal SLR and RLR values are used. For the electric circuits, the loudness loss is evaluated with  $m = 0.5$  or 1, corresponding to voltage or power addition. (Which  $m$ -value and which frequency range to use will be given below for each application.)

The electric circuit loudness loss LC is computed according to Equation (A.2-1) with a flat weighting over the (logarithmic) frequency band 300 to 3400 Hz. The logarithmic band is divided into  $(N-1)$  equal sections, i.e. by  $N$  points.

$$LC(m) = -\frac{10}{m} \log_{10} \sum_{i=1}^N K_i \cdot 10^{-0.1mL_i} \quad (A.4-7)$$

where

$$K_1 = K_N = \frac{1}{2(N-1)}$$

$$K_i = \frac{1}{N-1}; \quad i = 2 \dots (N-1) \quad (A.4-8)$$

If the summation (or integration) is done on a linear frequency scale Equation (A.4-7) transforms into

$$LC(m) = \frac{1}{m} C - \frac{10}{m} \log_{10} \int_{300}^{3400} 10^{-0.1mL(f)} \frac{1}{f} df \quad (A.4-9)$$

where

$$C = 10 \log_{10} \left\{ \ln \left( \frac{f_2}{f_1} \right) \right\} \quad (\text{A.4-10})$$

Thus, if  $f_1 = 300 \text{ Hz}, f_2 = 3400 \text{ Hz}$ , then  $C = 3.9 \text{ dB}$  (A.4-11)

and if  $f_1 = 500 \text{ Hz}, f_2 = 2000 \text{ Hz}$ , then  $C = 1.4 \text{ dB}$  (A.4-12)

#### A.4.4.2 Talker echo loudness rating (TELR)

Following the principles given in § A.4.4.1 we have

$$TELR = SLR(\text{set}) + RLR(\text{set}) + L_e \quad (\text{A.4-13})$$

where  $SLR(\text{set})$ , +  $RLR(\text{set})$  refer to the telephone set involved.

The echo loss  $L_e$  is computed according to Equation (A.4-7) or (A.4-8) with  $m = 1$  and  $f_1 = 300 \text{ Hz}$ ,  $f_2 = 3400 \text{ Hz}$ .

$$L_e = LC(m = 1) \quad (\text{A.4-14})$$

*Note 1* – For  $TELR = 9 \text{ dB}$ , the echo of the speaker’s voice would reach his ear with about 0 dB loss averaged over a logarithmic frequency scale.

*Note 2* – The value of  $L_e$  computed by this method is identical to the value obtained using the method given in Recommendation G.122, § 4.2.

*Note 3* – The difference between talker’s sidetone and talker echo is that the latter of course is associated with delay. Recent investigations indicate that, at about 2-4 ms delay, the effect of talker echo begins to be clearly distinguishable from even a strong talker’s sidetone. To avoid subscriber annoyance from echo, the echo needs more suppression than sidetone signals, all the more so, the longer the delay is. The problem is under study in Question 9/XII.

*Note 4* – For circuits terminated by a digital 4-wire telephone set, an echo path is introduced by the acoustic path from earphone to microphone. In this case the echo path loss [ $L_i$  or  $L(f)$  in Equation (A.4-7) and (A.4-9) respectively] includes the acoustic path as well as the send and receive characteristics of the handset. It is practical to relate a weighted measure of the echo path loss to the 0 dBr 4-wire points, using Equation (A.4-7) or (A.4-9) with  $m = 1$ . This weighted measure is designated AEL (0).

#### A.4.4.3 Listener echo loudness rating (LELR)

LELR is a weighted average of the listener echo LE over the frequency band 300 to 3400 Hz. The weighting should be done according to Equations (A.4-6) or (A.4-8) with  $m = 0.5$ .

*Note* – In North American practice a term WEPL, “weighted echo path loss”, is used. When one computes WEPL, the factor  $m = 0.5$  but the weighting is flat over a *linear* frequency scale. In general, LELR and WEPL do not differ very much numerically.

#### A.4.4.4 Crosstalk receive loudness rating (XRLR)

The harmful effect of crosstalk is of course directly related to the actual speech level in the disturbing channel. Unfortunately, there is no firm relation between send loudness rating (SLR) and speech level in telephone networks, as investigations have shown. Therefore, it would be misleading to include SLR in a crosstalk loudness rating. Expected speech levels (mean and standard deviation) have to be estimated from other network data. The problem is dealt with in Recommendation P.16.

Following the principles given in § A.4.4.1 we have:

$$XRLR = RLR(\text{set}) + L_x \quad (\text{A.4-15})$$

where  $RLR(\text{set})$  refers to the telephone set involved.

The crosstalk  $L_x$  is computed according to Equation (A.4-9) or (A.4-8) with  $m = 1, f_1 = 500 \text{ Hz}, f_2 = 2000 \text{ Hz}$ .

$$L_x = LC(m = 1) \quad (\text{A.4-16})$$

*Note* – In practice the crosstalk value at around 1020 Hz has been found to represent  $L_x$  fairly well (see Recommendation G.134, § A.3.1).

## ANNEX B

(to Recommendation G.111)

### Recommended values and limits of the loudness ratings for circuits in international connections

The connection configuration is shown in Figure B-1/G.111 and the LR values in Table B-1/G.111.

The interfaces between the national and international sections are assumed to be at relative level of 0 dBr, as is the case for digital interconnections. The relation between LRs at a 0 dBr point and at a virtual analogue switching point (VASP) is discussed in § 1.1. See also Table D-1/G.111.

*Note* – The long-term traffic weighted mean values of LRs should be the same for each *main* type of subscriber categories, such as urban, suburban and rural. Considering the mean value only for the *whole* country in the transmission plan might lead to a discrimination against some important customer groups.

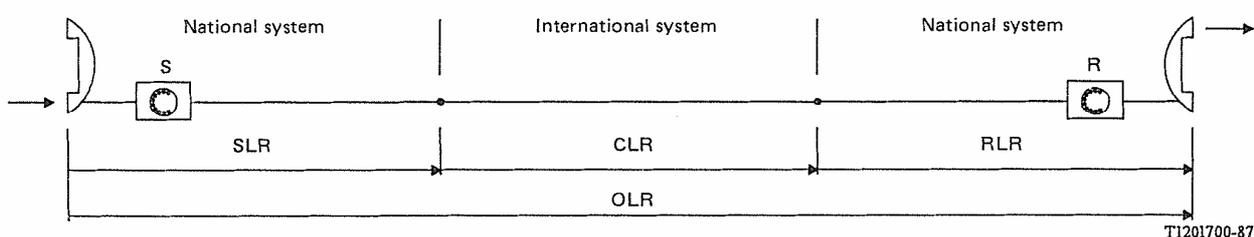


FIGURE B-1/G.111

#### Designation of LRs in an international connection

TABLE B-1/G.111

#### LR values as cited in Recommendations G.111 and G.121

	SLR	CLR	RLR	OLR
Traffic-weighted mean values:				
long term	7-9 <sup>b)</sup>	0-0.5 <sup>e)</sup>	1-3 <sup>b), f)</sup>	8-12 <sup>a) e), f)</sup>
short term	7-15 <sup>b)</sup>	0-0.5 <sup>e)</sup>	1-6 <sup>b), f)</sup>	8-21 <sup>a) e), f)</sup>
Maximum values for an average-sized country	16.5 <sup>c)</sup>		13 <sup>c)</sup>	
Minimum value	-1.5 <sup>d)</sup>			

a) Recommendation G.111, § 3.2.

b) Recommendation G.121, § 1.

c) Recommendation G.121, § 2.1.

d) Recommendation G.121, § 3.

e) When the international chain is digital, CLR = 0. If the international chain consists of one analogue circuit, CLR = 0.5, and then OLR is increased by 0.5 dB. (If the attenuation distortion with frequency of this circuit is pronounced, the CLR may increase by another 0.2 dB. See § A.4.2).

f) See also the remarks made in § 3.2.

## ANNEX C

(to Recommendation G.111)

### Translation of LR values into CRE values

A full discussion can be found in Annex D, on the general relations between reference equivalents (REs), corrected reference equivalents (CREs), and loudness ratings (LRs). Strictly speaking, one should make a distinction between:

- a) CREs as derived by computation from subjective REs,
- b) R25 equivalents measured subjectively,
- c) Objective R25 equivalents (OR25Es) measured objectively.

However, Administrations seem to use the term CRE for all three categories, and this practice has been adopted here.

The relation between CREs and LRs can be written as follows:

$$SCRE = SLR_w + x$$

$$RCRE = RLR_w + y$$

(The index  $w$  here indicates a measurement according to Recommendation P.79, wideband, 0.2-4 kHz).

In Recommendation G.111, of the *Red Book*, Fascicule III.1, we find

$$x = 5; y = 5$$

However, these values are only general averages. Administrations should determine  $x$  and  $y$  by *actual objective LR measurements* on those typical sets which have been assigned CRE values in their national networks. Large variations may be found for specific sets, compared to the general averages.

## ANNEX D

(to Recommendation G.111)

### Justification for the values of LR appearing in Recommendations G.111 and G.121

#### D.1 *General*

##### D.1.1 *General principles*

When redrafting Recommendations G.111 and G.121 on the basis of CRE in 1980, the following two principles had been observed:

- a) Administrations which used planning methods based on reference equivalents should not have serious difficulties in applying the new Recommendations.
- b) The transmission performance provided for subscribers should not deteriorate.

When recommending LR values in Recommendations G.111 and G.121 *Red Book* version, it was not possible to strictly apply this principle because:

- the difference CRSE-SLR depends on the type of handset used;
- in any case, the sending and receiving differences for various types of sets may vary, since different values of RE may be found in various laboratories or with different testing teams.

To satisfy principle b) above, it was agreed to take  $SLR = CSRE - 5$  and  $RLR = CRRE - 5$  dB which are the means (over a variety of types of sets) of the differences found in the CCITT Laboratory during a certain period. This

indicates that transmission performance will be safeguarded as a whole, but certain Administrations may encounter difficulties to meet recommended values of LR.

#### D.1.2 *Optimum values*

The conversion of “preferred values” formerly expressed as RE is not clear.

On the basis of the information available in 1984 [1] an overall LR of 5 dB was recommended, but it was realized that a larger value might be preferable in the presence of echoes.

#### D.1.3 *Addition of LRs in the case of analogue subscribers' stations*

Let us define the national system for CREs (see *Red Book* version of this Recommendation, §§ A.3.3 and A.3.4). The overall CRE of a connection is:

$$Y = CSNRE + CRNRE + X + D_0 + A \quad (D-1)$$

where  $CSNRE = CSRE + b + c$  (sending) and  $CRNRE = CRRE + b + c$  (reception),

where

$CSRE$  and  $CRRE$  relate to the local systems,

$b$  is the  $CRE$  of a trunk junction,

$c$  is the total of the losses (at 800 or 1000 Hz) of long-distance national circuits, exchanges and 2-wire/4-wire terminating unit,

$X$  is the total loss of international circuits,

$D_0$  and  $A$  (ADE) are defined in Annex B, *Red Book* version.

Similarly, the overall LR will be:

$$Z = SNLR + RNLr + X + D'_0 + A' \quad (D-2)$$

with

$$SNLR = SLR + b' + c \quad (D-3)$$

where

$D'_0$  is negligible and

$A', b'$  are virtually equal to  $A, b$  (cf. Annex B, *Red Book* version).

If it is assumed (§ D.1.1 above) that  $SLR = CSRE - 5$ ,  $RLR = CRRE - 5$ , and  $D'_0 = -4$  (since the Recommendations were originally applied to old-type subscriber's stations), then  $Z = Y - 6$  dB is obtained.

In fact, the recommended values were derived from  $Z = Y - 5$  dB, which is not a significant difference, but the recommendations for the national system are a little more stringent, because the ADE of national long distance circuits was included in the national system.

## D.2 *LRs recommended in 1988*

D.2.1 The maximum values and the minimum for sending have been retained; other values differ from those recommended in 1984, as explained below.

### D.2.2 *Optimum value*

Values directly determined in terms of overall LR (Recommendations P.78 or P.79) during conversation tests are available as follows:

British Telecom [1], in the presence of room noise, found a maximum mean opinion score (MOS) for OLR = 3 dB and a minimum difficulty percentage for OLR = 7.2 dB. It was proposed to adopt 5 dB as the optimum value and an almost equally good performance was found in a range from 1 to 10 dB.

NTT [2] found values between 4 and 6 dB according to noise conditions; an optimum OLR = 5.34 dB is used in the OPINE model.

According to the TRANSRAT model [3], maximum MOS is obtained for  $L_e = 7.5$  (corresponding to  $L_e = 8.5$  in Supplement No. 3, § 1, of Volume V, where  $L_e = \text{OLR(EARS)}$ ). There are reasons to think that  $L_e$  is higher than OLR (See Recommendation P.79) by a few dB, so that this should not differ significantly from the above values; this point is being studied under Question 7/X.II.

In any case, such maxima are very flat and there is evidence that higher values would apply in the presence of echoes. It may be provisionally concluded that to obtain the best performance, OLR (See Recommendation P.79) should not exceed about 10 dB, but should not be much smaller.

### D.2.3 Traffic weighted mean values

An optimum OLR of 10 dB was adopted and it was subdivided between sending and receiving in the same manner as for the LRs of digital subscriber's sets (the latter being referred to a 0 dBr point). This gives the long-term objectives.

The values of *A* (see § D.1.3) used previously, which took into account both effects of attenuation distortion on loudness and naturalness of speech, were replaced by a fixed allowance of 2 dB (1 dB in each national system, see § A.3) when analogue subscriber's stations are used. This, combined with a small margin in the previous Recommendation version (see § D.1.3 of this Annex), made it possible to increase the traffic-weighted means for sending by about 4 dB and to keep the same overall values.

### D.3 Conclusion

Table D-1/G.111 recapitulates the values of LR recommended in 1984 and those which are recommended now.

TABLE D-1/G.111  
**Values (dB) of sending, receiving, circuit and overall loudness rating  
 cited in Recommendations G.111 and G.121**

	Recommended in 1984			Recommended in 1988					
	SLR	RLR	OLR	SLR		RLR		CLR	OLR
	VASP	VASP		0 dBr	VASP	0 dBr	VASP		
Optimum value			≈ 5						≈ 10
Traffic-weighted mean values:									
(minimum)	6.5	-2.5	8	7	10.5	1	-3	(Note 1)	8
long-term objective									
(maximum)	8	-1	11	9	12.5	3	-1	(Note 1)	12
short-term objective (maximum)	14	2.5	20.5	15	18.5	6	2	(Note 1)	21
Maximum values for an average-sized country	20	9		16.5	20	13	9	$n \times 0,5$ (Note 2)	
Minimum for sending	2			-1.5	2				

Note 1 – CLR = 0 for a digital international circuit, 0.5 dB for an analogue one. The average number of international circuits is about 1.

Note 2 – *n* is the number of analogue international circuits.

Note 3 – The VASPs are defined in Recommendation G.101.

### References

- [1] CCITT Contribution COM XII-97 (British Telecom), Study Period 1981-1984.
- [2] OSAKA (S.) and KAKEHI (N.): Objective model for evaluating telephone transmission performance, *Review of the Electric Communication Laboratories*, Vol. 34, No. 4, pp. 437-444, 1986.
- [3] HATCH (R. W.) and SULLIVAN (J. L.): Transmission rating models for use in planning of telephone networks, *Conference Record NTC 76*, pp. 23.2-1 to 23.2-5, Dallas, 1976.
- [4] CCITT *Handbook on Telephony*, ITU, Geneva 1987.

ITU-T G-SERIES RECOMMENDATIONS  
TRANSMISSION SYSTEMS AND MEDIA, DIGITAL SYSTEMS AND NETWORKS

<b>INTERNATIONAL TELEPHONE CONNECTIONS AND CIRCUITS</b>	
General definitions	G.100–G.109
<b>General Recommendations on the transmission quality for an entire international telephone connection</b>	<b>G.110–G.119</b>
General characteristics of national systems forming part of international connections	G.120–G.129
General characteristics of the 4-wire chain formed by the international circuits and national extension circuits	G.130–G.139
General characteristics of the 4-wire chain of international circuits; international transit	G.140–G.149
General characteristics of international telephone circuits and national extension circuits	G.150–G.159
Apparatus associated with long-distance telephone circuits	G.160–G.169
Transmission plan aspects of special circuits and connections using the international telephone connection network	G.170–G.179
Protection and restoration of transmission systems	G.180–G.189
Software tools for transmission systems	G.190–G.199
<b>INTERNATIONAL ANALOGUE CARRIER SYSTEM</b>	
GENERAL CHARACTERISTICS COMMON TO ALL ANALOGUE CARRIER-TRANSMISSION SYSTEMS	
Definitions and general considerations	G.210–G.219
General Recommendations	G.220–G.229
Translating equipment used on various carrier-transmission systems	G.230–G.239
Utilization of groups, supergroups, etc.	G.240–G.299
INDIVIDUAL CHARACTERISTICS OF INTERNATIONAL CARRIER TELEPHONE SYSTEMS ON METALLIC LINES	
Carrier telephone systems on unloaded symmetric cable pairs, providing groups or supergroups	G.320–G.329
Carrier systems on 2.6/9.5 mm coaxial cable pairs	G.330–G.339
Carrier systems on 1.2/4.4 mm coaxial cable pairs	G.340–G.349
Additional Recommendations on cable systems	G.350–G.399
GENERAL CHARACTERISTICS OF INTERNATIONAL CARRIER TELEPHONE SYSTEMS ON RADIO-RELAY OR SATELLITE LINKS AND INTERCONNECTION WITH METALLIC LINES	
General Recommendations	G.400–G.419
Interconnection of radio-relay links with carrier systems on metallic lines	G.420–G.429
Hypothetical reference circuits	G.430–G.439
Circuit noise	G.440–G.449
COORDINATION OF RADIOTELEPHONY AND LINE TELEPHONY	
Radiotelephone circuits	G.450–G.469
Links with mobile stations	G.470–G.499
<b>TESTING EQUIPMENTS</b>	
<b>TRANSMISSION MEDIA CHARACTERISTICS</b>	
General	G.600–G.609
Symmetric cable pairs	G.610–G.619
Land coaxial cable pairs	G.620–G.629
Submarine cables	G.630–G.649
Optical fibre cables	G.650–G.659
Characteristics of optical components and subsystems	G.660–G.699

*For further details, please refer to ITU-T List of Recommendations.*

## ITU-T RECOMMENDATIONS SERIES

Series A	Organization of the work of the ITU-T
Series B	Means of expression: definitions, symbols, classification
Series C	General telecommunication statistics
Series D	General tariff principles
Series E	Overall network operation, telephone service, service operation and human factors
Series F	Non-telephone telecommunication services
<b>Series G</b>	<b>Transmission systems and media, digital systems and networks</b>
Series H	Audiovisual and multimedia systems
Series I	Integrated services digital network
Series J	Transmission of television, sound programme and other multimedia signals
Series K	Protection against interference
Series L	Construction, installation and protection of cables and other elements of outside plant
Series M	TMN and network maintenance: international transmission systems, telephone circuits, telegraphy, facsimile and leased circuits
Series N	Maintenance: international sound programme and television transmission circuits
Series O	Specifications of measuring equipment
Series P	Telephone transmission quality, telephone installations, local line networks
Series Q	Switching and signalling
Series R	Telegraph transmission
Series S	Telegraph services terminal equipment
Series T	Terminals for telematic services
Series U	Telegraph switching
Series V	Data communication over the telephone network
Series X	Data networks and open system communications
Series Y	Global information infrastructure and Internet protocol aspects
Series Z	Languages and general software aspects for telecommunication systems